STEP # 3:

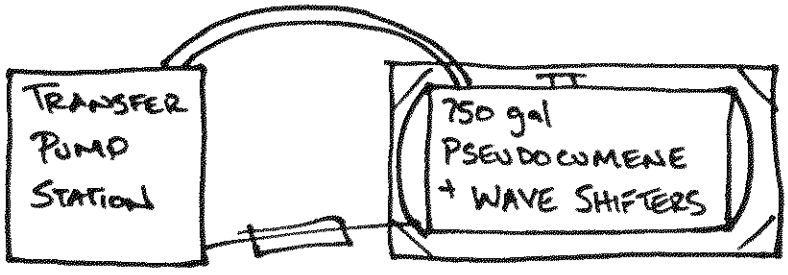

CIRCULATE PSEUDOCUMENE AND WAVE SHIFTING POWDER FOR 5 TO 20 MINUTES TO FULLY DISSOLVE WAVE SHIFTERS

STEP #4:

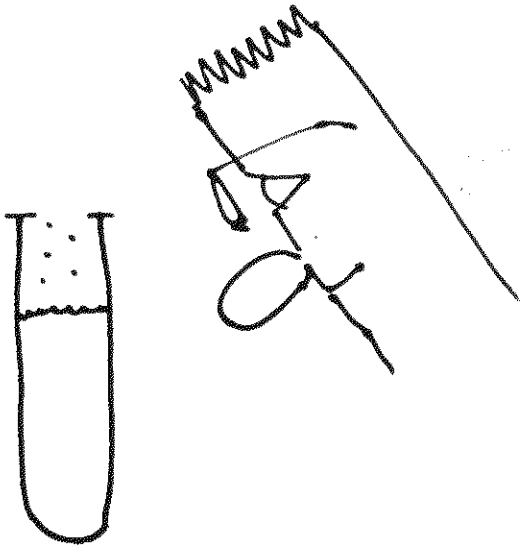

SAMPLE AND TEST MIXTURE