STEP # 5:

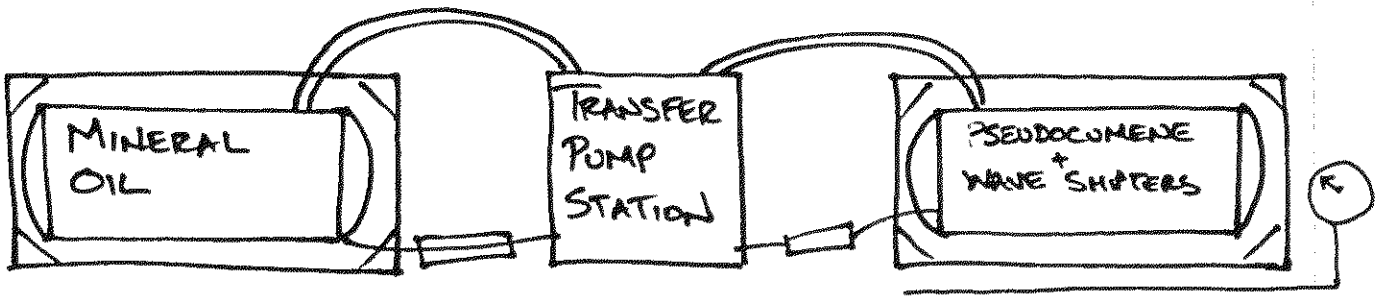

TRANSFER 6750 GALLONS OF MINERAL OIL TO THE 150 TANK @ 150 GPM (45 MINUTE TRANSFER TIME)

USE A SCALE TO WEIGH TRANSFERED LIQUID.

STEP # 6:

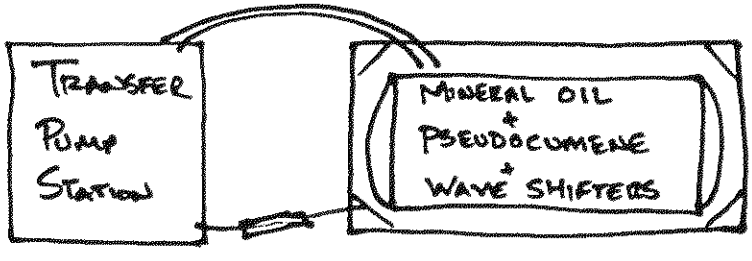

CIRCULATE MINERAL OIL / PSEUDOCUMENE / WAVE SHIFTER MIXTURE TO FULL BLEND